



LOTUS

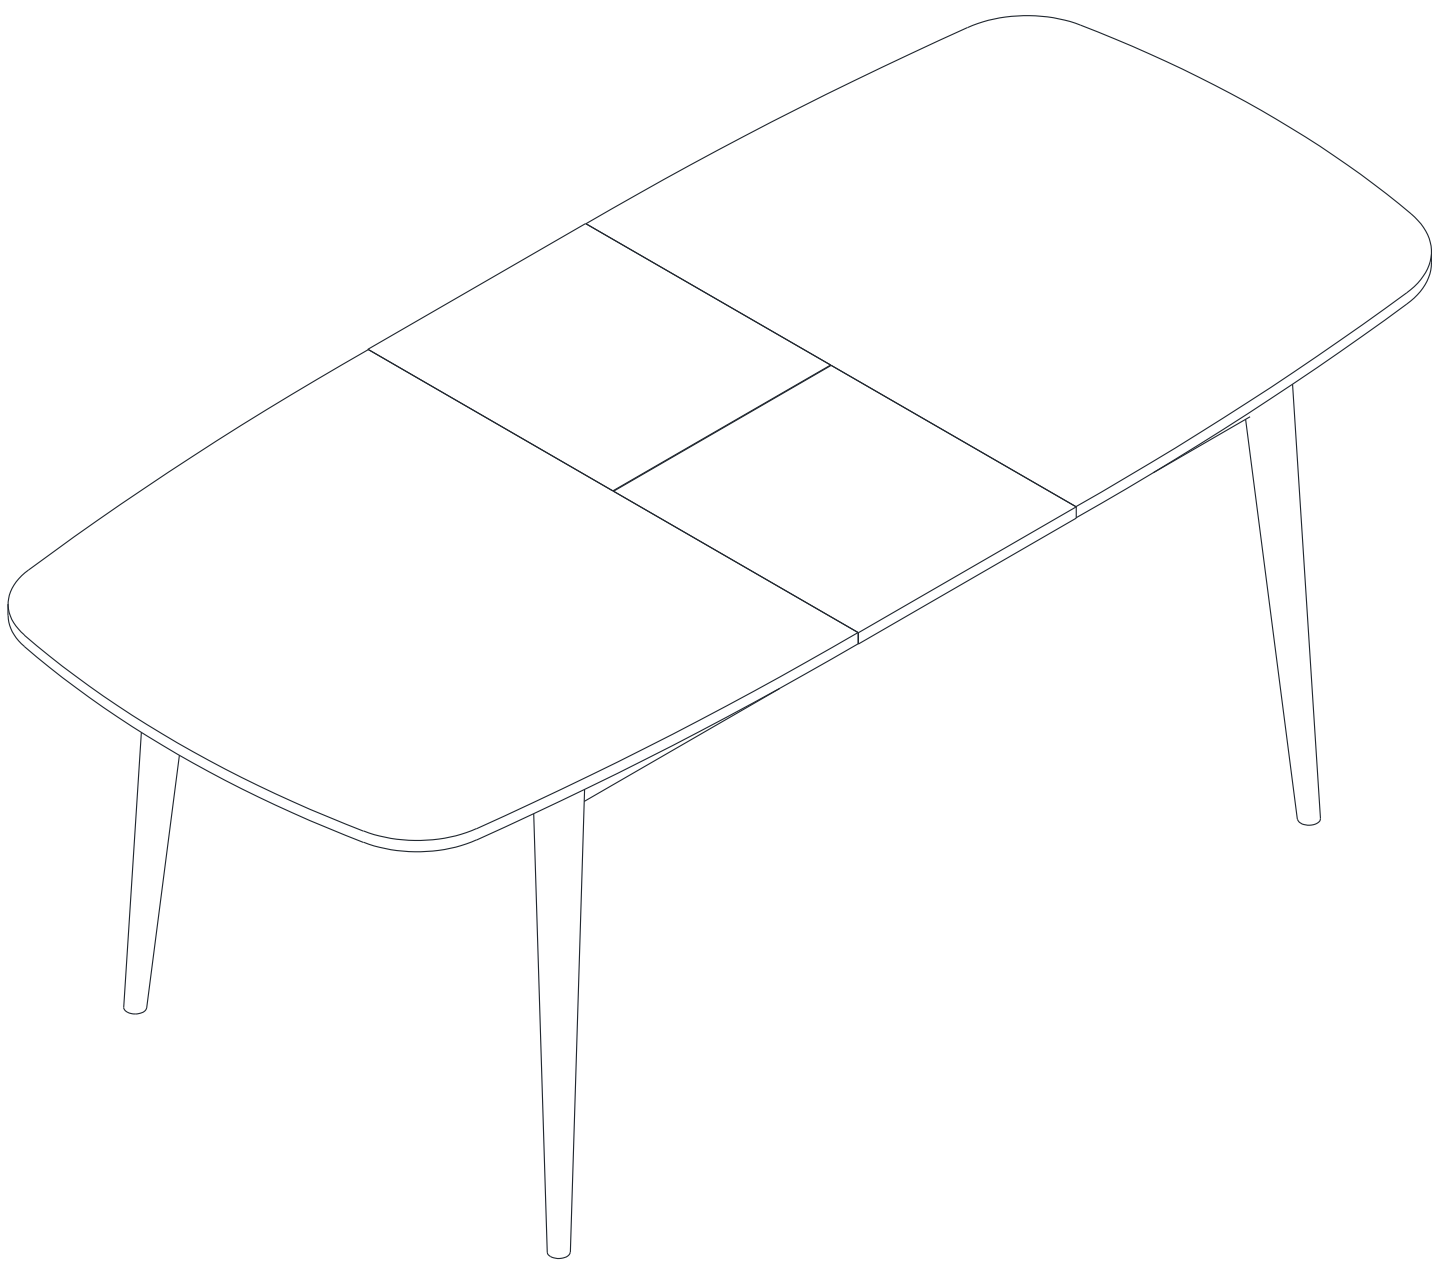


Dear Customer,

We design and produce our products for people to love and have fun with them as we do.


The product you bought was subjected to all sorts of tests and control before sending out to you.

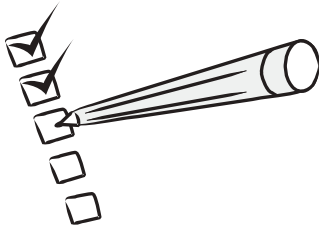

Before start assembling, please check the whole components and accessories according to the lists. If you bought more than one product, to prevent confusion be sure that you completed the first product. Then start the other product's assembling.

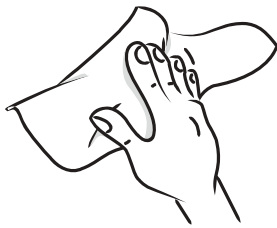

Before start assembling, please clean all the components with a damp cloth. Also for usual cleaning, this will be enough.






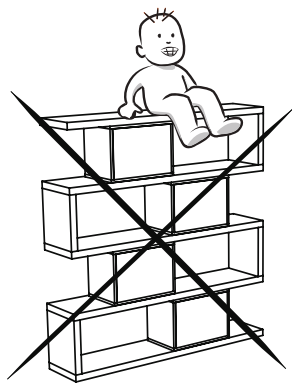


Do not use your furniture for out of purposes. If you would like to use it, please contact us for further questions.

Do not directly contact your furniture with excessive heat, cold and humidity because the product can be affected..

ATTENTION !!

Minifix is the main connection material used in products. Before starting assembly, please check the drawings below.

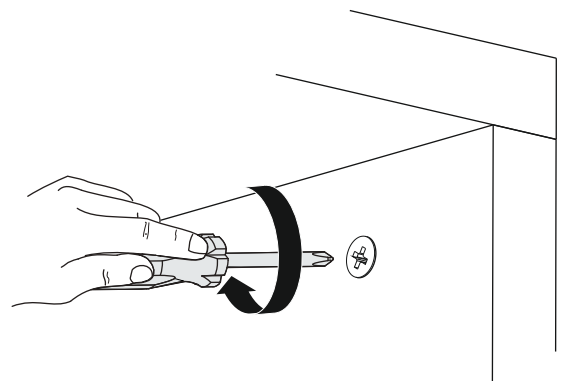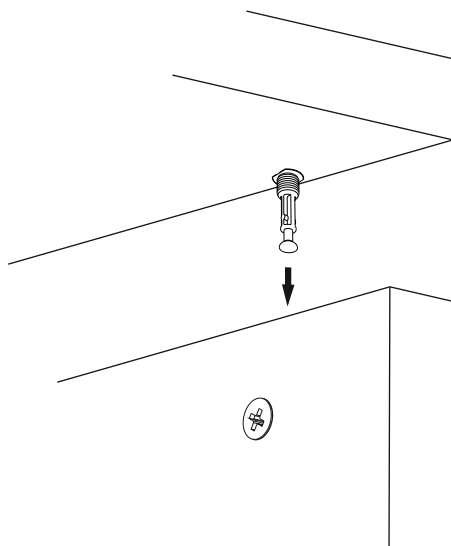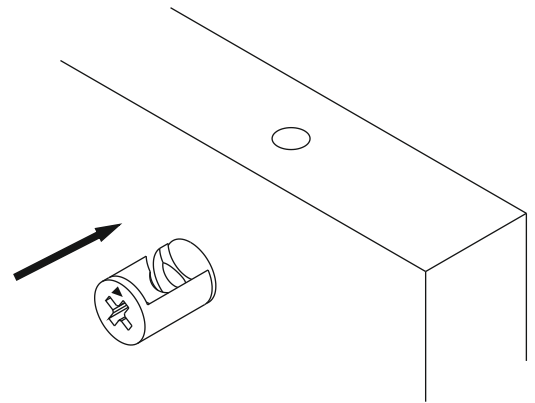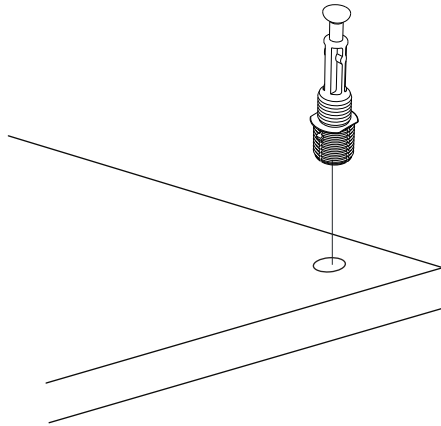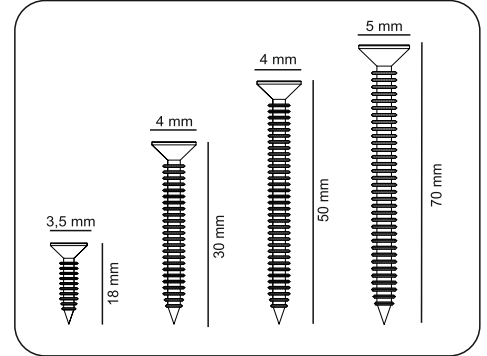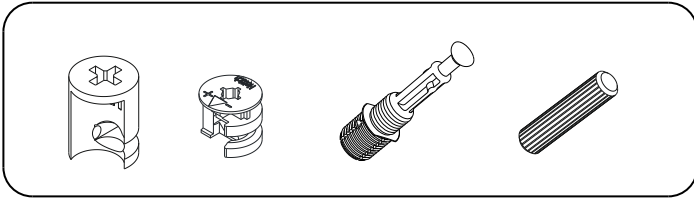


ACCESSORY LIST

LOTUS YEMEK MASASI

BEYAZ - 09108 -

A23 Minifix M8 8x34 12x	A22 Minifix G18 15x14 12x	A18 YHB VD 3,5x18 100x	H33 YSB MVD 8x30 8x	A41 YHB VD 4x30 8x
A76 MSA KVL DŞ 8x13 8x	A77 MSA KVL ERK 8x13 8x	A74 MSA TKR 4x	V67 MS BRKT 4x	V93 CNTK MS RAY HG-KLT-650x450 2x
A88 MSA KTB ST 1T	V13 AHSP AYK 720 mm 4x	0x	0x	0x

GENERAL VIEW

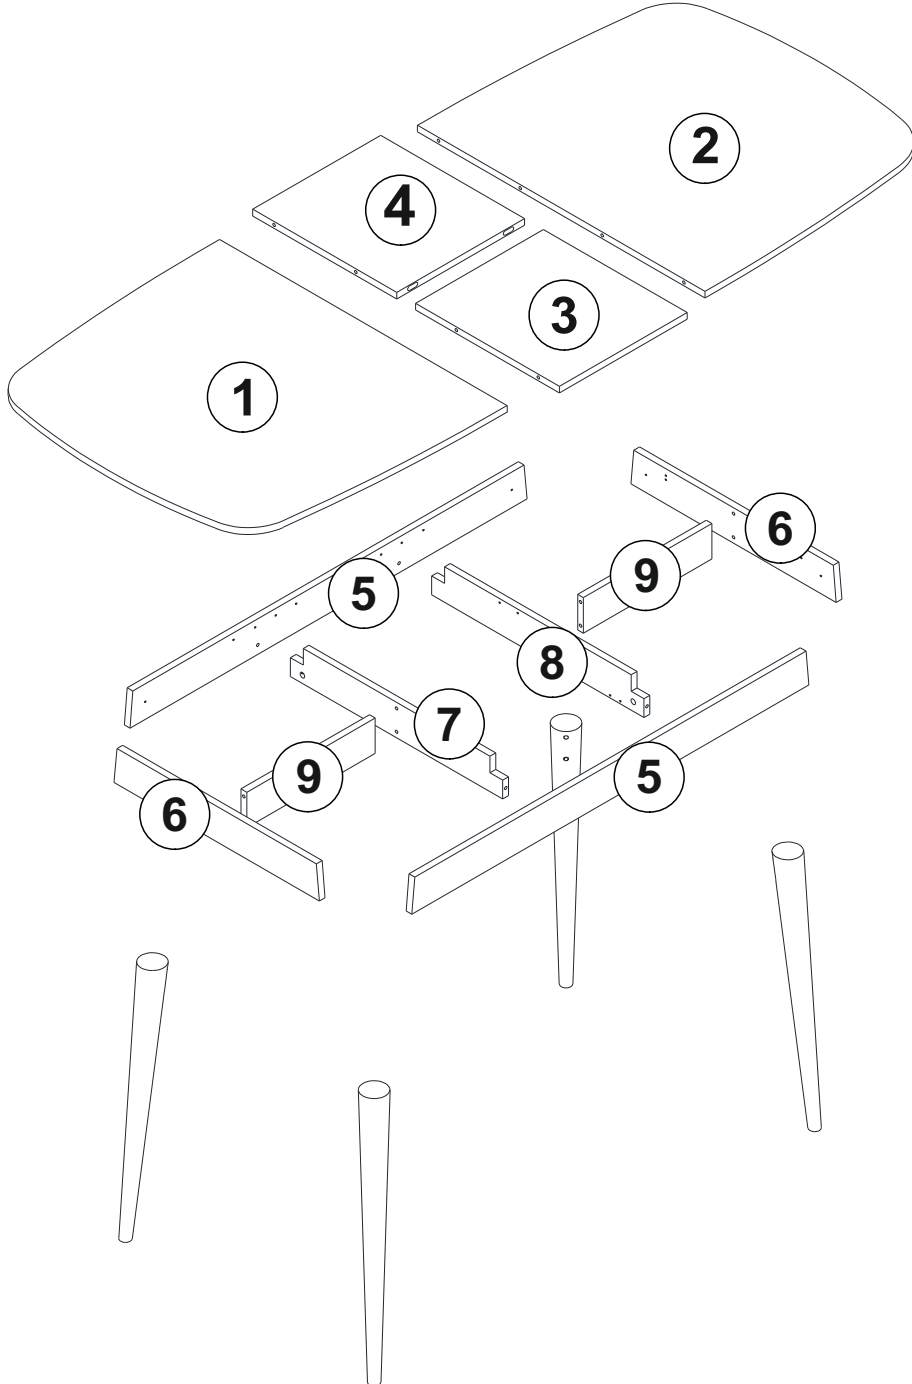


.01	1	800	900	18
.02	1	800	900	18
.03	1	449	400	18
.04	1	449	400	18
.05	2	1242	96	18
.06	2	642	96	18
.07	1	664	96	18
.08	1	664	96	18
.09	2	400	96	18


M.M.01.06.33.09108
Lotus Bohem Tarz Yemek Masası -
Beyaz/Ahşap Ayak




Montaj talimatını indirmek için tıklayın

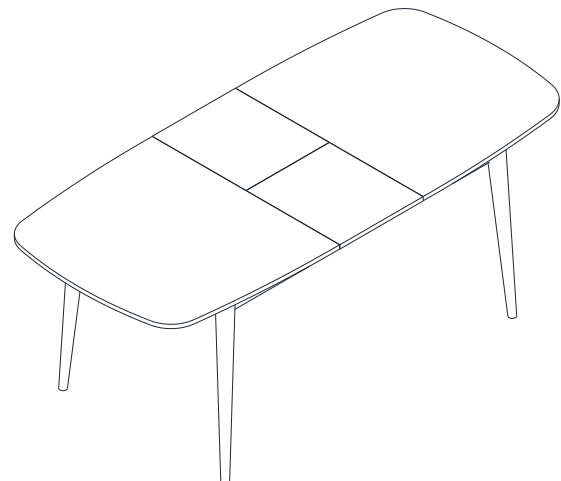

1

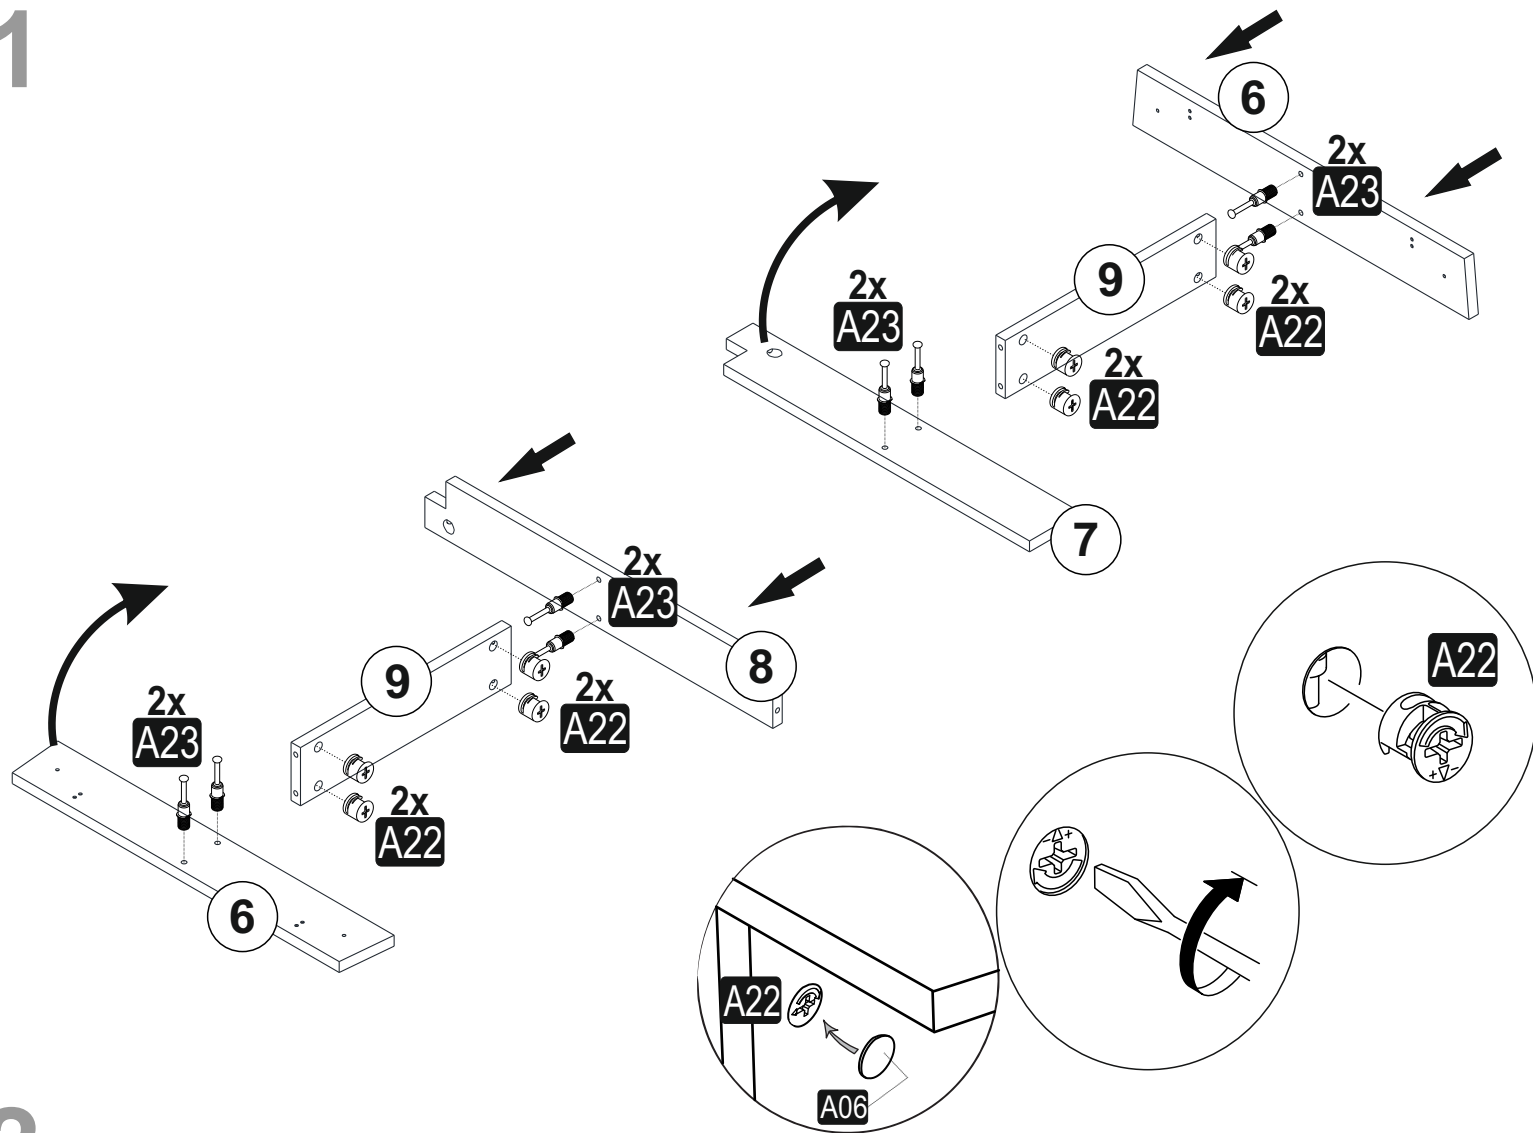


2

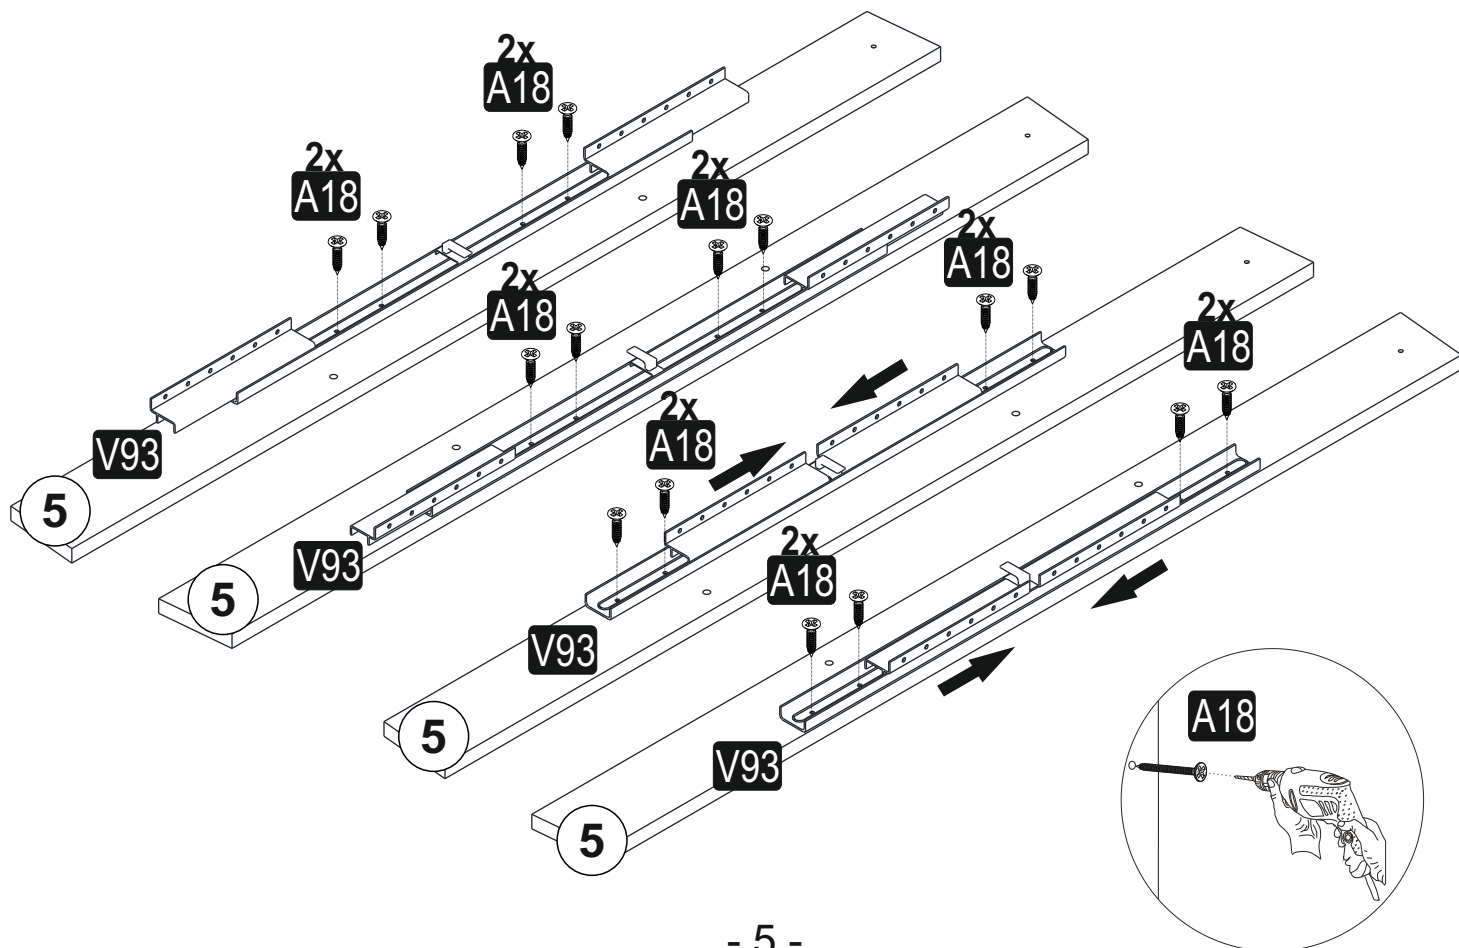


3

Isometric assembly diagram of a three-drawer unit. The diagram shows the drawers (6) being inserted into the cabinet frame (5). Callouts indicate the use of 10x A18 screws for the drawers and 10x A18 screws for the frame. A circular inset shows a detailed view of the corner joint assembly, labeled V67, which uses 10x A18 screws to secure the drawers to the frame.


5

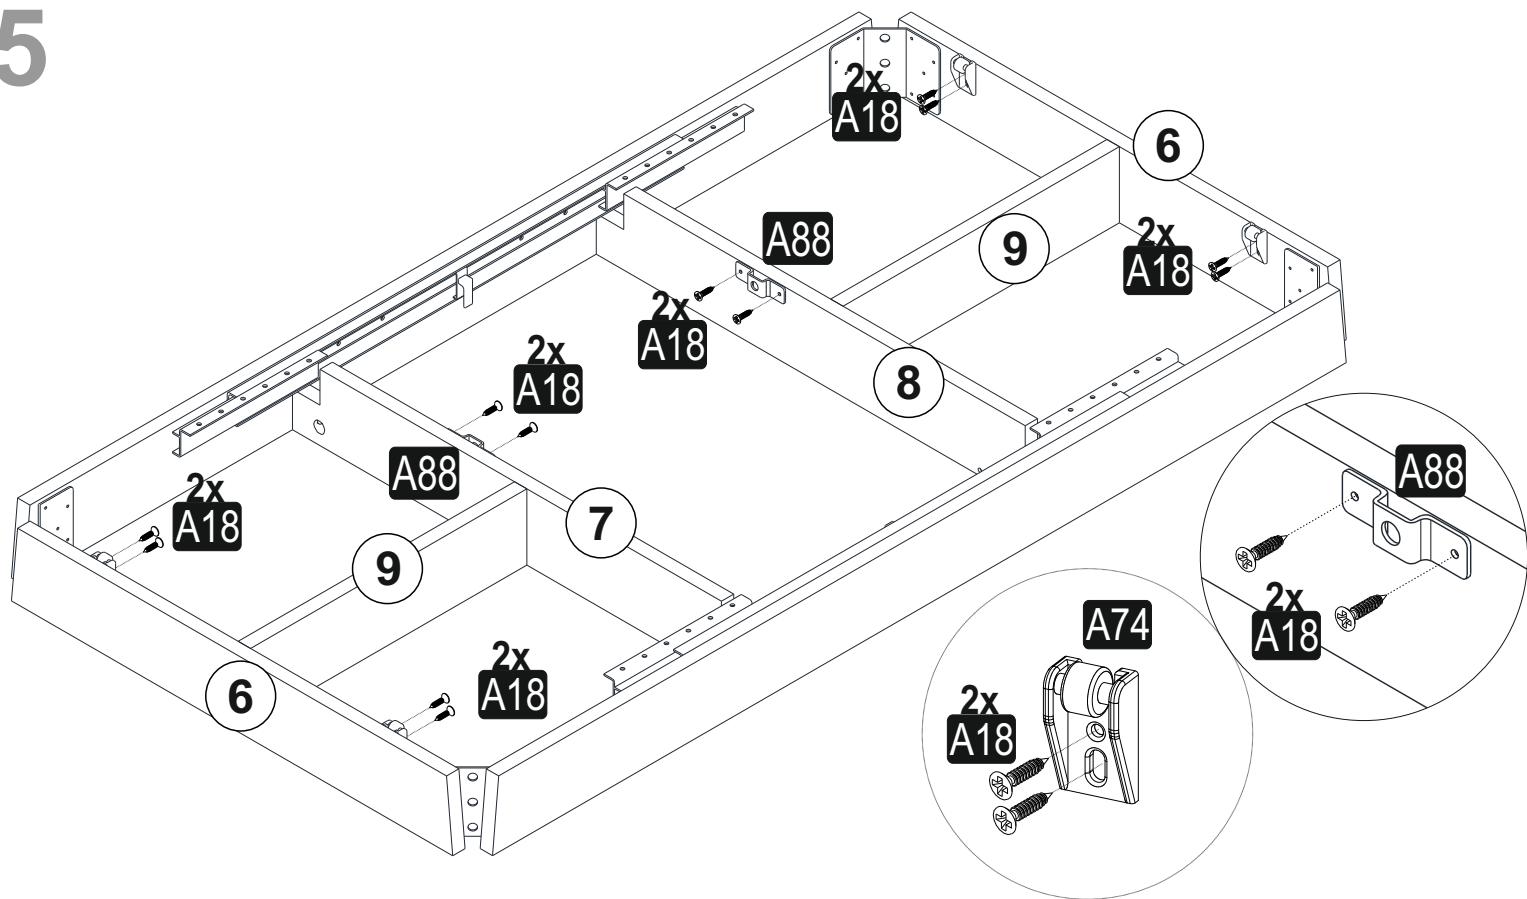


6

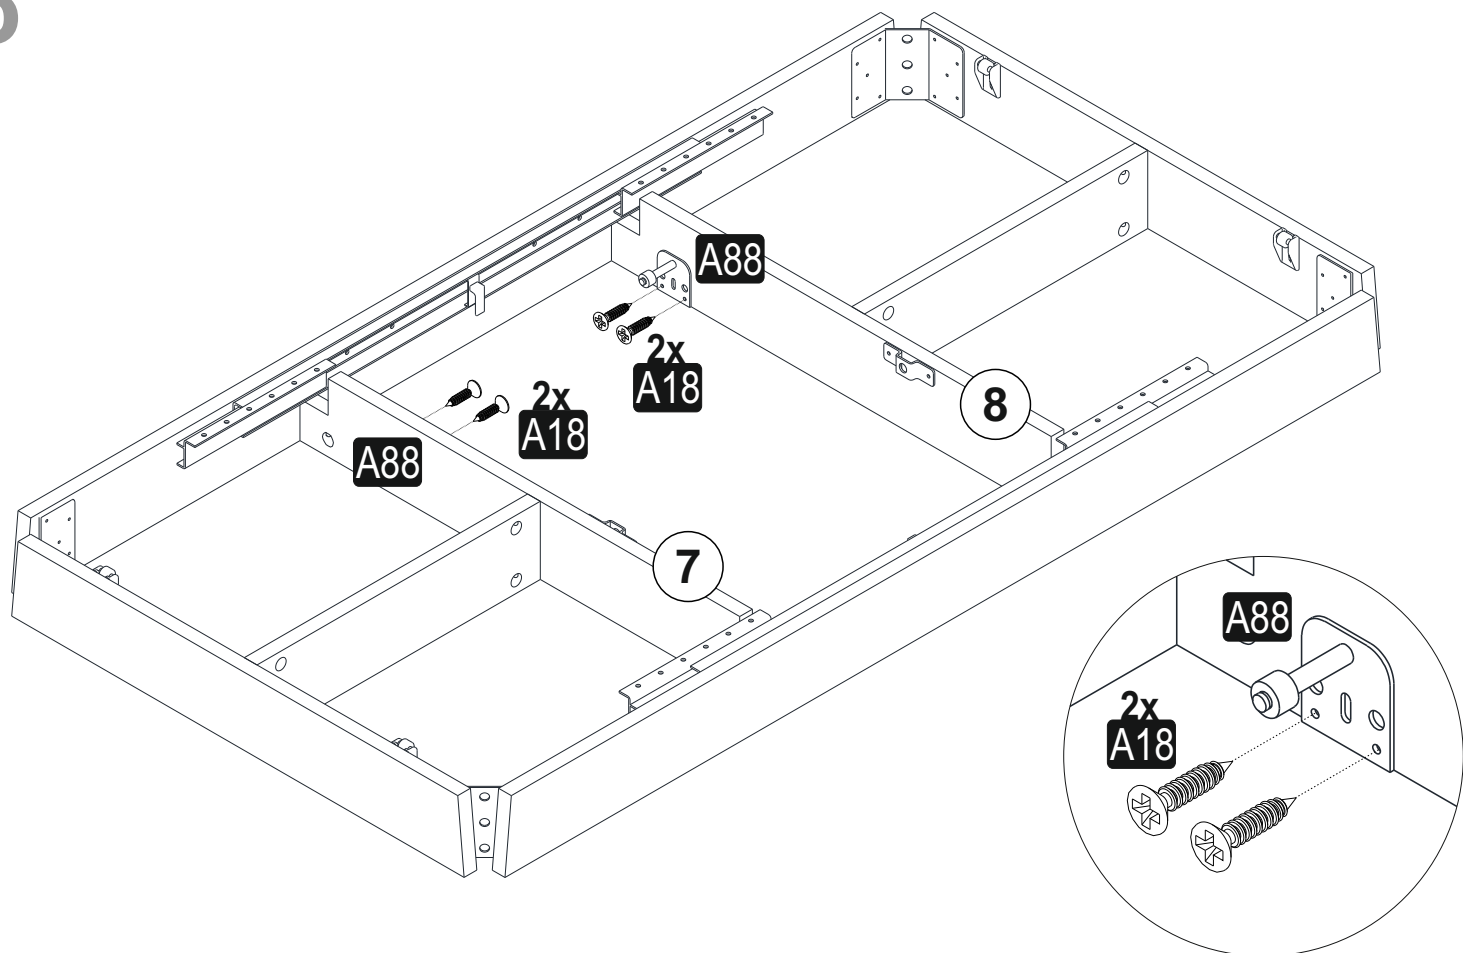


7

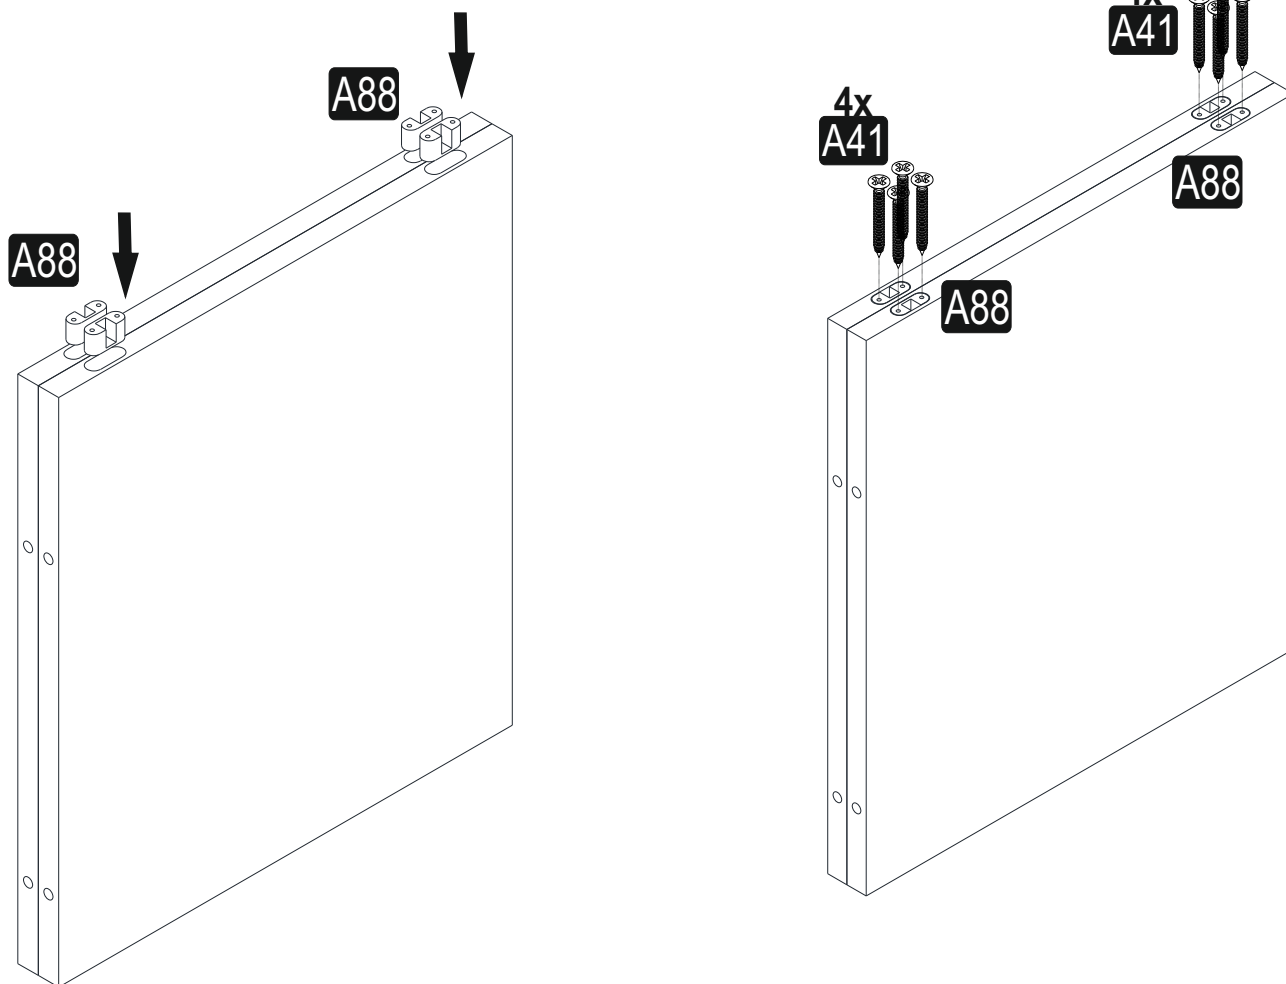

8

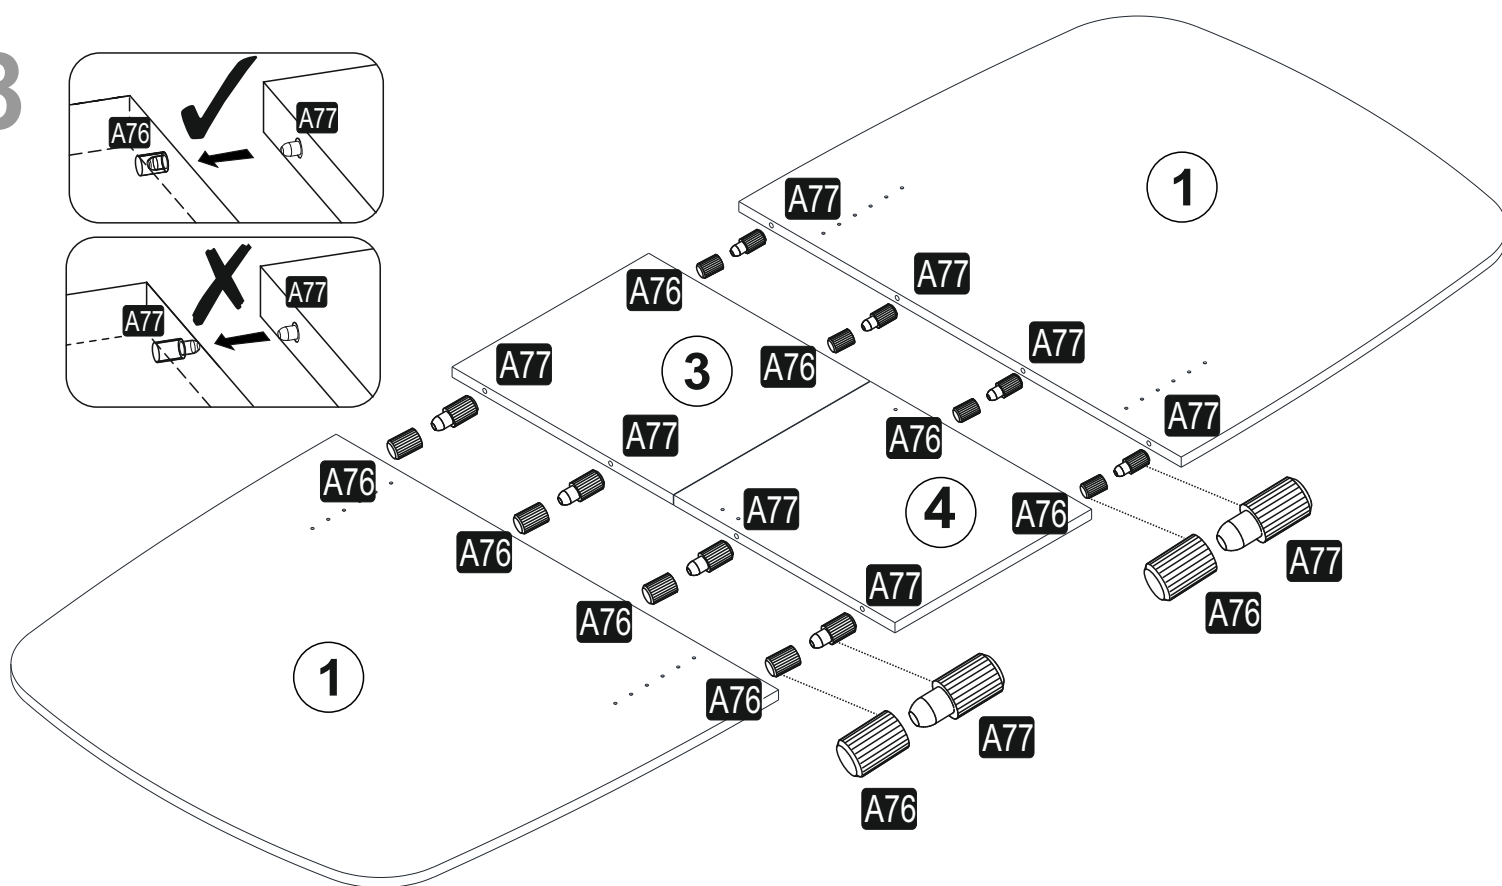

9

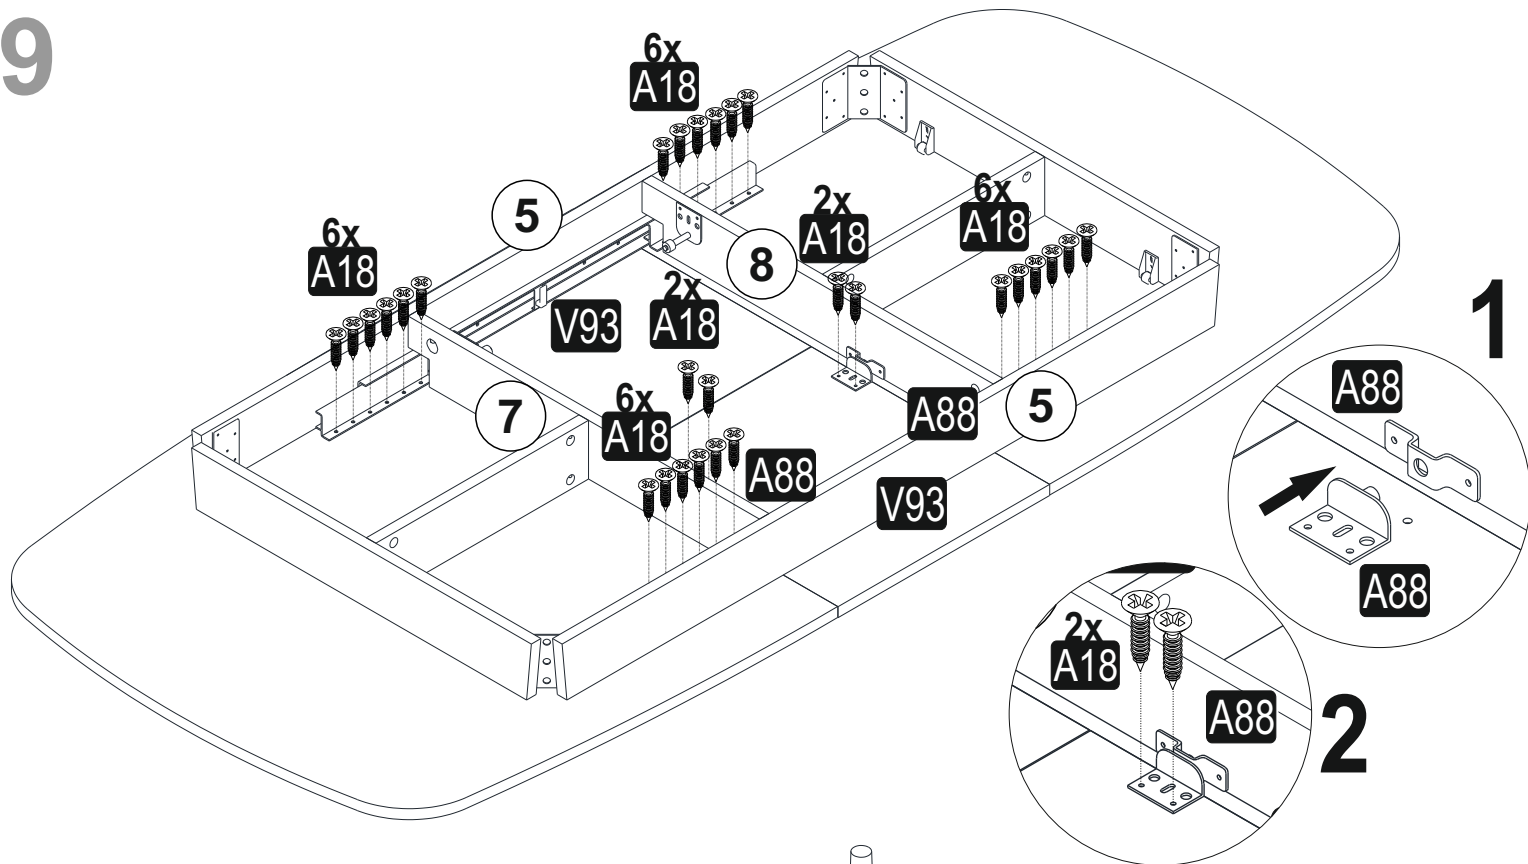

10

